

DESCRIPTION: Three Phase, Variable Voltage Control

APPLICATION: Constant Resistance Loads

Model Number	Fuse Amps	kVA @ Max Rated Volts	Open Chassis Dimensions Inches			Open Chassis List Price	Ventilated Dimensions H x W x D	Enclosure List Price Adder
			Height	Width	Depth			
THREE PHASE, 240 VAC INPUT, 0-238 VAC OUTPUT, 50 or 60Hz⁵ (ALSO FOR 208/220/230 VAC INPUT)								
18E-2-10	10	4	10.62	8.25	5.37	524.00	14 12 8	Contact Factory
18E-2-20	20	8	12.62	10.25	5.37	542.00	16 14 8	***
18E-2-30	30	12	15.12	12.87	6.37	562.00	24 20 10	***
18E-2-50	50	20	15	13	6.25	705.00	24 20 10	***
18E-2-80	80	32	21	13	6.25	781.00	30 20 9	***
18E-2-120	120	48	21	13	8.25	1,449.00	30 20 9	***
18E-2-150	150	60	27	17	8.25	1,511.00	36 24 12	***
18E-2-250	250	100	27	21	9	2,241.00	36 24 12	***
18E-2-350	350	139	27	27	10.5	2,351.00	42 36 12	***
18E-2-450	450	180	33	27	10.5	2,601.00	42 36 12	***
18E-2-600	600	239	39	27	10.5	3,746.00	48 36 12	***
18E-2-1200	1200	478	57	33	11	5,950.00	72 36 12	***
THREE PHASE, 480 VAC INPUT, 0-460 VAC OUTPUT, 50 or 60Hz⁵ (ALSO FOR 380/415/440 VAC INPUT)								
18E-4-10	10	8	10.62	8.25	5.37	549.00	14 12 8	Contact Factory
18E-4-20	20	16	12.62	10.25	5.37	569.00	16 14 8	***
18E-4-30	30	24	15.12	12.87	6.37	589.00	24 20 10	***
18E-4-50	50	40	15	13	6.25	736.00	24 20 10	***
18E-4-80	80	64	21	13	6.25	820.00	30 20 9	***
18E-4-120	120	96	21	13	8.25	1,449.00	30 20 9	***
18E-4-150	150	120	27	17	8.25	1,511.00	36 24 12	***
18E-4-250	250	200	27	21	9	2,241.00	36 24 12	***
18E-4-350	350	278	27	27	10.5	2,351.00	42 36 12	***
18E-4-450	450	359	33	27	10.5	2,601.00	42 36 12	***
18E-4-600	600	478	39	27	10.5	3,746.00	48 36 12	***
18E-4-1200	1200	965	57	33	11	5,950.00	72 36 12	***

NOTES:

- Standard units supplied with:
 - Manual control potentiometer on 2 feet of cable
 - Control isolation transformer (except where noted †)
 - Factory installed 2-millisecond fuses
- For recommended spare fuses, see FUSE CHART, Page 36. Use of any other fuse voids all warranties.
- Enclosures supplied by others must be properly ventilated. See VENT SCHEDULE, Page 37.
- Dimensions are approximate, refer to unit drawing for construction.
- Factory set for 60Hz. Must specify if for 50 Hz usage.

List prices may be subject to trade classification discounts. Contact your local Payne Controls Authorized Distributor or representative.

Prices shown are subject to change without notice.

OPTION NAME	OPTION ORDER No.	OPTION DESCRIPTION	LIST PRICE ADDER
VOLTAGE LIMIT	9	RMS Output Voltage Limit (Field adjustable)	25.00
MILLIAMPER CONTROL	11A 11B 11C 11D 11E 11F 11G 11H	For closed-loop applications only. (See Option 20 for open-loop applications) 1-5 ma., ≤1000 Ω 2-10ma., ≤1000 Ω 4-20 ma., ≤600 Ω 12-20 ma., ≤600 Ω 10-50 ma., ≤300 Ω 1-5 volts DC 2-10 volts DC Other. Specify ma. range and input impedance.	38.00
CURRENT LIMIT	12	RMS Output Current Limit (Field Adjustable, includes current transformer)	115.00
ISOLATED CHASSIS	14A 14B	For installation in non-vented enclosures. Electrically Isolated Chassis, 10-30A Electrically Isolated Chassis, 50-80A	65.00 97.00
SOFT START	19	1/2 second voltage ramp, to reduce inrush current.	25.00
OPTICALLY ISOLATED ma. <u>EXTERNAL CONTROL CARD</u>	20A 20B 20C 20D 20E 20H	Optically isolated. May be field installed. Suitable for open-loop control. 1-5 ma., ≤1000 Ω 2-10ma., ≤1000 Ω 4-20 ma., ≤600 Ω 12-20 ma., ≤600 Ω 10-50 ma., ≤300 Ω Other. Specify ma. range and input impedance.	65.00
HEATSINK OVERTEMP SWITCH	24A 24B	Overtemp trip of controller. For external indicating circuit or alarm.	55.00
120V PILOT	28	120 VAC On/Off Pilot Control	38.00
EXTERNAL POWER	33	External trigger circuit power. Specify voltage to be supplied.	38.00
380/415 VAC INPUT	18E- 3 -etc.	Rated for 380/415 VAC (nominal) Input. (Change Model No. from 18E-4-etc. to 18E-3-etc.)	N/C
550 VAC INPUT	18E- 5 -etc.	Rated for 550 VAC Input. (Change Model No. from 18E-4-etc. to 18E-5-etc.)	38.00
600 VAC INPUT	18E- 6 -etc.	Rated for 600 VAC Input. (May require size increase of base model.) (Change Model No. from 18E-4-etc. to 18E-6-etc.)	210.00

18E OPTION NOTES:

- To order, specify option number separately, and add option price to control list price.
- See page 38 for detailed option description.
- Options must be ordered with control (except Option 20)
- Certain combinations of options may not be compatible. Consult local representative or factory.
- Consult factory for option requirements not shown.